


# **BAUKNECHT BEDIENUNGSANLEITUNG**

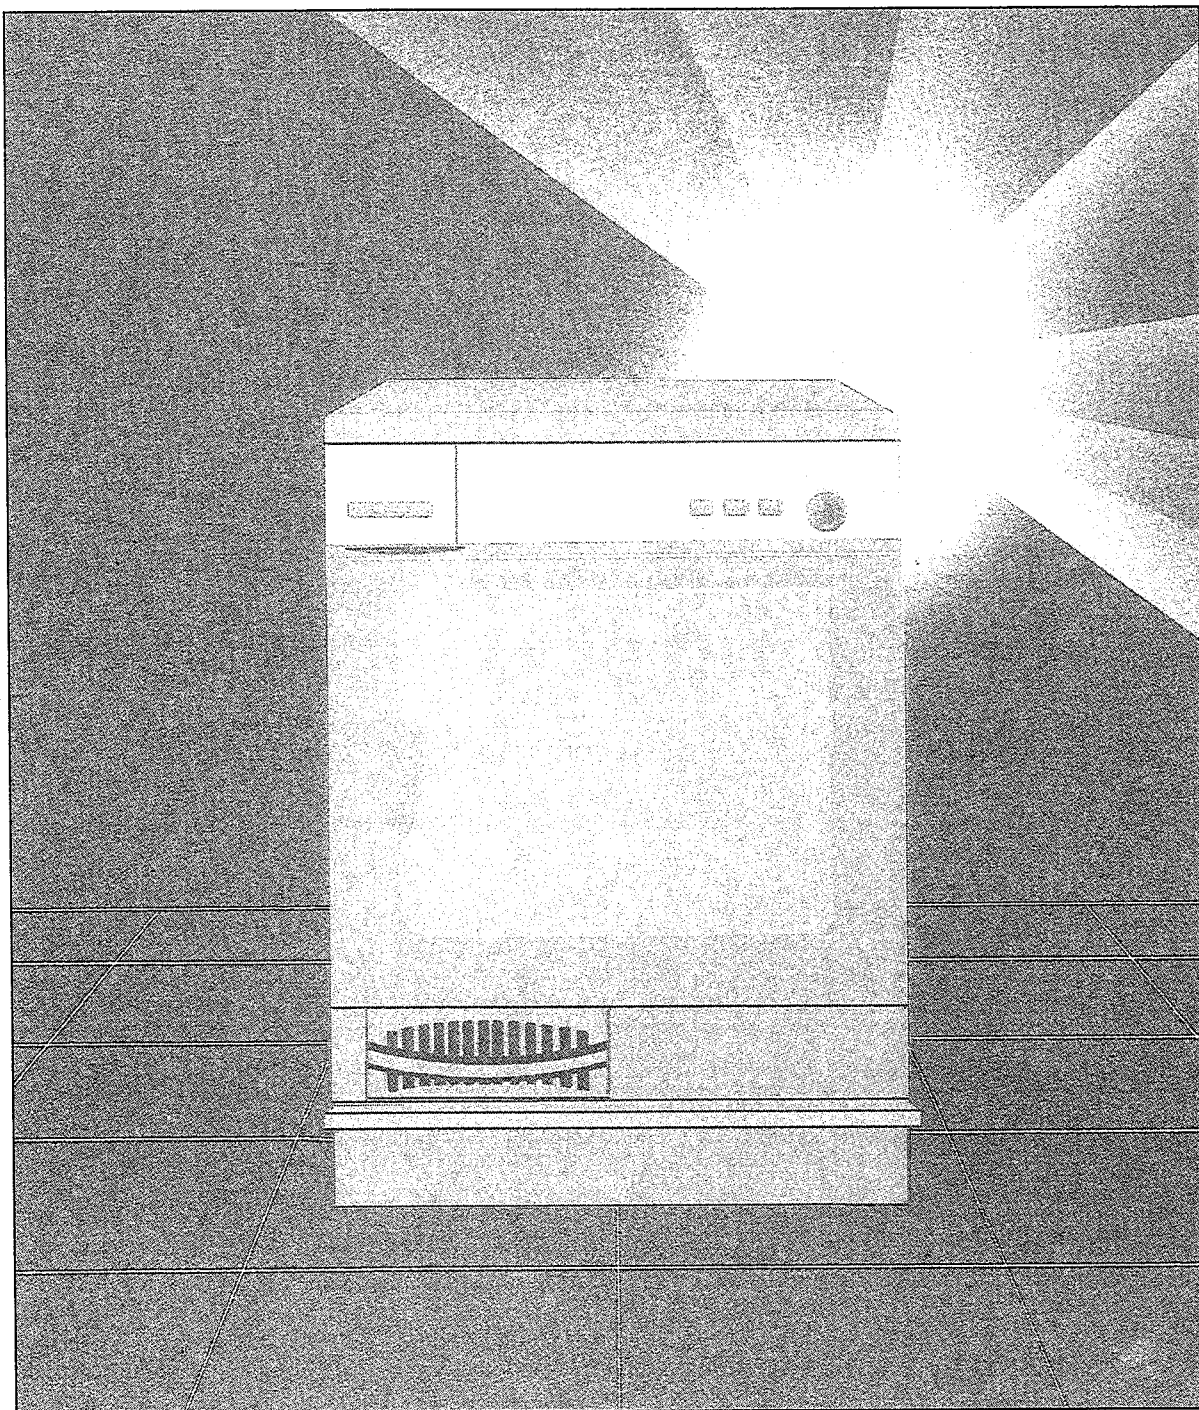

TRK 4821

TRK 4840 / 4842 / 4850

TRK 4960 / 4970 / 4974

## TABLE OF CONTENTS

GB

DESCRIPTION OF THE DRYER	PAGE 12
FILTER AND WATER CONTAINER	PAGE 12
BEFORE USING THE DRYER	PAGE 13
PRECAUTIONS	PAGE 13
PREPARING THE LOAD	PAGE 14
SELECTING THE DRYING PROGRAMME AND OPTIONS	PAGE 15
STARTING AND COMPLETING THE PROGRAMME	PAGE 15
INSTALLATION	PAGE 16
ELECTRICAL CONNECTION	PAGE 17
DRAINAGE SYSTEM	PAGE 17
DOOR REVERSIBILITY	PAGE 18
MAINTENANCE	PAGE 19
TROUBLE SHOOTING GUIDE	PAGE 19
AFTER SALES SERVICE	PAGE 19

To get full satisfaction from your appliance, please read carefully your instruction manual.

## DESCRIPTION OF THE DRYER

### 1. Worktop

### 2. Condensation water container

### 3. Contact pin

### 4. Door . (Door opening can be reversed).

See "Door reversibility" section.

*To open the door:* pull the handle out.

*To close the door:* push the door gently until it closes.

### 5. Lint filter

### 6. Child safety-lock

#### 6a. For dryers with clear door:

- To activate turn the plastic screw counter clockwise until it snaps in.

#### 6b. For dryers with non-clear door

- The child safety is near the door lock (in the illustration on the left of the aperture).

Operating principle:

Using a coin or a screwdriver turn the plastic screw clockwise by 90°. The door cannot be locked.


### 7. Inside lamp (if provided)

Only comes on when the door is open (the programme has to be selected) .

Light off: the programme selection button is set to „0“.

### 8. Push-button for heat exchanger flap

### 9. Heat exchanger

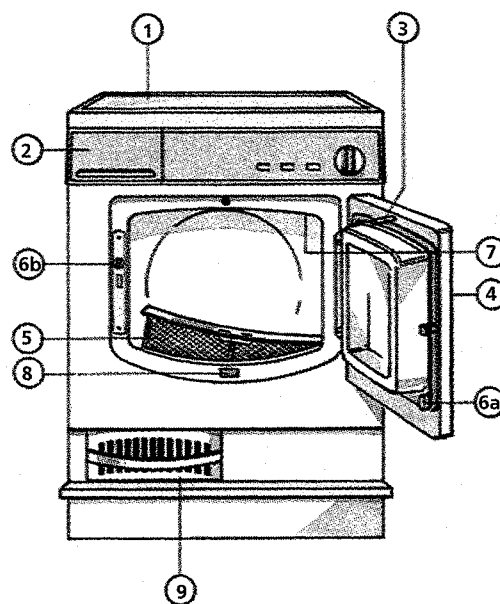

## FILTER

### Filter

After every use clean the fluff filter.

1. Pull the filter upwards.
2. Brush lint using a soft brush or your fingertips.
3. Push it back well into place.

### Filter Warning Indicator

It warns that the filter is dirty and needs to be cleaned.

If the laundry is insufficiently dry check that the filter is not clogged.

## WATER CONTAINER

1. Open the flap pulling gently to the left and remove the water container to empty after every drying cycle.
2. Open the lid and empty the container.
3. When emptied close lid tightly and push container back into housing until it clicks.

### Water container indicator

Indicates that the water container is full and the drying programme is automatically stopped.

Empty the water container and restart the programme by pressing the START button.

## BEFORE USING THE DRYER

- After unpacking please make sure that the appliance is undamaged. In case of doubt do not use the appliance but call a qualified technician or your retailer.
- Packaging material (plastic, polystyrene, etc.) must be kept out of the reach of children as it constitutes a potential risk.
- This appliance was designed for domestic use and must be used exclusively for drying laundry.


### Environmental hints

#### 1. Packing material ♻

The packing material can be 100% recycled, as confirmed by the recycling symbol.

#### 2. Appliance

The appliance is built from recyclable materials. If you decide to scrap the dryer act responsibly and observe local waste disposal by laws. Cut off the power cord so that the appliance cannot be connected to the mains.

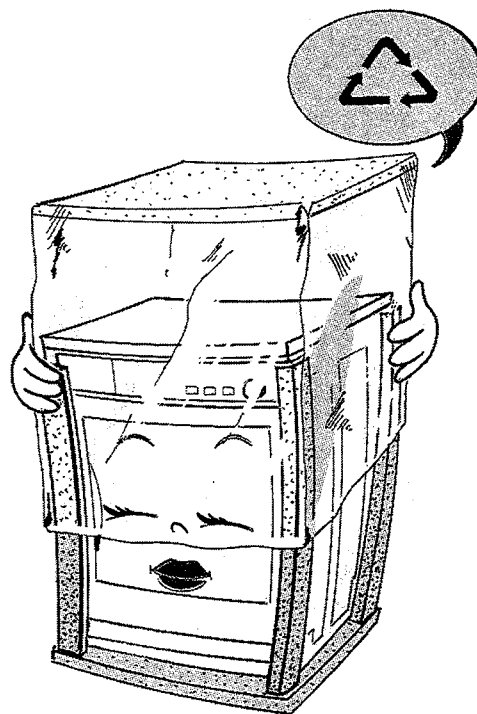

## PRECAUTIONS

### Child safety

- After use, set the programme selector to position "0". This prevents children from switching on the appliance accidentally.
- For domestic use only.

**This appliance conforms to EEC directive 93/68.**

## PREPARING THE LOAD

### Clothes preparation

Check that all fastenings are closed and that pockets are empty. Turn the articles inside out. Place clothes loosely in the drum to make sure that they don't get tangled.

### Max. drying weight

• Cottons	5.0 kg
• Rapid	3.5 kg
• Synthetics	2.5 kg
• Delicates	1.5 kg

The given weights correspond to a standard wash load.

### Sort clothes as follows:

#### A) By care symbols

On the collar or inside seam:

- ☐ Suitable for tumble drying
- ☐ Tumble drying at low temperature only
- ☒ Do not tumble dry

#### B) By amount and thickness

Whenever the load is bigger than the dryer capacity, separate clothes according to thickness (e.g. towels from thin underwear).

#### C) By type of fabrics

**Cottons/linen:** Towels, cotton jersey, bed and table linen made of cotton or linen.

**Synthetics:** Blouses, shirts, overalls, etc. made of polyester or polyamid, as well as for cotton/ synthetic mixes.

**Delicate:** Sensitive fabrics for example viscose

#### D) By drying level



- Sort into: iron dry, cupboard dry, etc.
- For delicate articles press the option button "Gentle".

### Do not tumble dry:

Woollens, silk, delicate fabrics, nylon stockings, delicate embroidery, fabrics with metallic decorations, bulky items such as sleeping bags, etc.

**Attention: Do not dry articles which have been treated with a drying cleaning fluid or rubber clothes (danger of fire or explosion).**

**Do not dry laundry dirty with vegetable oils.**

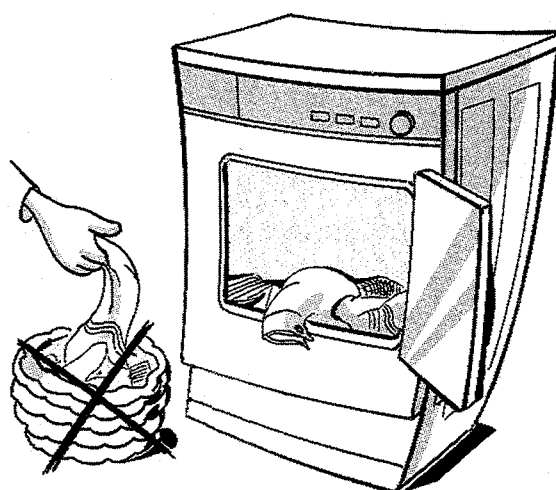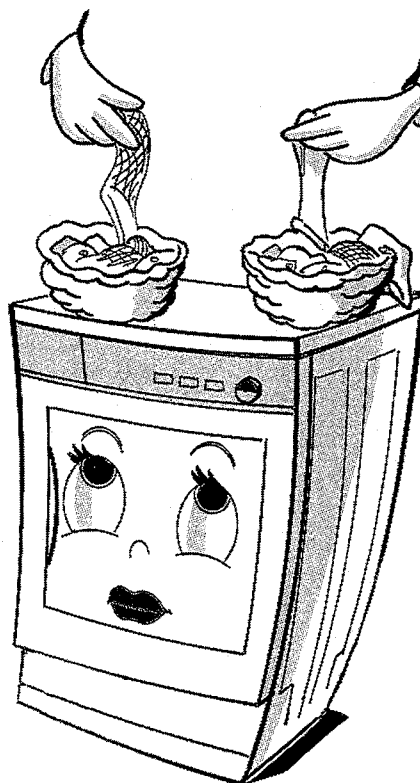

## SELECTING THE DRYING PROGRAMME AND OPTIONS

1. Select the programme and the options as indicated in the table (see Programme table).

### 2. Options (If available)

To select an option, press the corresponding button before pressing the START button. The indicator above the button lights up to confirm that a selection has been made. An alarm sounds to indicate that an incorrect selection has been made (incompatible options). Press the button again to cancel the option.

#### **Delayed starting**

Delays dryer starting. Every time the push button is pressed the start is delayed by an hour. Can be set to a max. of 9 h. When the required delay time has been set press START. If the dot in the display flashes the delayed starting is running. The count down is displayed. The delay can be changed or cancelled by selecting „0“. Opening the door stops the count-down. Close the door and press the START button again to continue the count-down.

#### **Gentle**

Reduces the drying intensity. Suitable for delicate articles.

#### **Plus**


Lengthens the drying time for heavy laundry.

#### **Rapid** (Cottons only)

Shortens the drying time (e.g. cloths or other laundry of equal size). Do not use the option for large items (e.g. sheets or similar). Max. 3.5 Kg.

#### **Buzzer**

Pressing the option initialises the buzzer signal the end of the cycle at regular intervals.

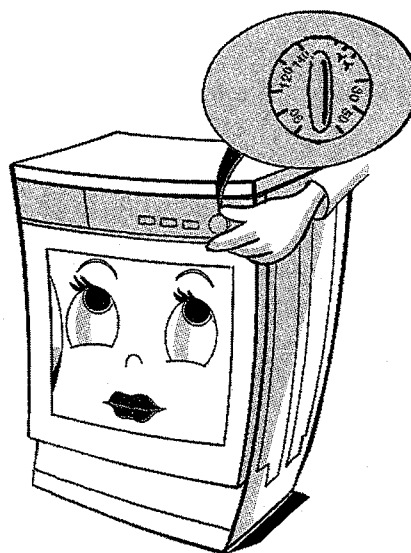

#### **Anti-crease protection**

If you have pressed this button and do not take the laundry out of the drum at the end of the drying cycle, an anti-crease cycle operates: the drum turns at regular intervals for 12 hours stopping the laundry from becoming wrinkled. If the option is selected with „Delayed Start“ the cycle operates both before and after the drying cycle.

**N.B.** If you do not press this button the anti-crease cycle is reduced to 60 minutes. If the buzzer is selected it will give a signal at regular intervals to remind you take the laundry out.


#### **Inside lamp**


On pressing this button a light comes on and lights the drum for 30 seconds.

#### **Programme Sequence Indication**

When the drying cycle has been started these leds indicate the „cycle status“.

## STARTING AND COMPLETING THE PROGRAMME


1. Having selected the desired programme and options, push the START button.
2. At the end of the programme a buzzer sounds to signal the end of the drying cycle. If you have selected the buzzer option, it will sound at regular intervals for some time.
3. If you do not unload the clothes at the end of the drying cycle, an automatic anti-crease cycle  will operate for maximum 20 minutes: the drum rotates at regular intervals preventing the clothes from creasing.
4. At completion of the programme, set the programme knob to position „0“. The „Machine on“ light goes off.
5. Clean the lint filter and empty the water container after every drying cycle.
6. If you change the programme during the drying cycle the dryer stops. To operate the new programme press the START button again.

**Note:** To interrupt the machine set the time selector knob to position  and press Start again. Wait some minutes to open the door.

For your safety the programme stops automatically if you open the door. To restart select the programme, and press the Start button again.

## INSTALLATION

- Install your dryer in a room which is not to extreme conditions.
- Remove the protective foil from the control panel.
- Level the dryer adjusting the four feet.
- Should the room temperature rise above 35° C during the operation of the dryer, please ventilate the room.
- Before running the first cycle ensure water container and heat exchanger are correctly positioned.

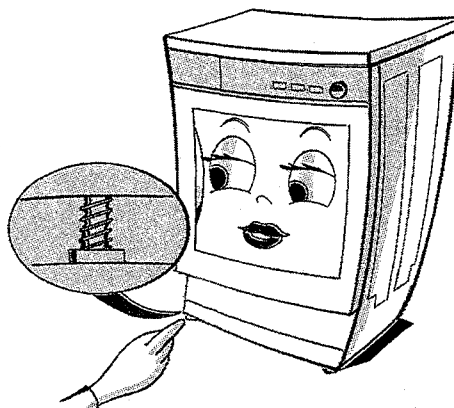

### Stacking kit


Your dryer can be stacked on top of your washing machine, using the stacking kit AMH 542, which is available from your dealer.

Minimum housing dimensions:

Width: 600 mm


Height: 820 mm

Depth: 600 mm

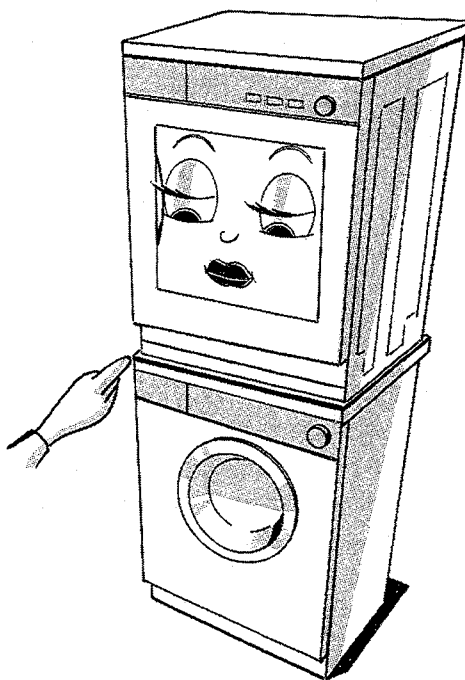

## ELECTRICAL CONNECTION

- **The electrical connection has to be carried out in compliance with local regulations.**
- Information on the voltage is given on the rating plate on the back of the dryer.
- **The earthing of this appliance is compulsory by law.**
- Do not use extension cords or multiple adapters.
- **Before any maintenance on the dryer, disconnect it from the mains supply.**
- Do not operate the dryer if it has been damaged during transport. Contact a qualified service technician.

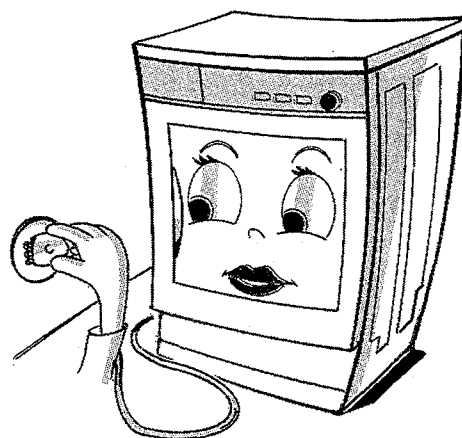


## DRAINAGE SYSTEM

### Direct drainage at the rear of the dryer

To empty the water container directly into a sink or a fixed drain:

- ① Remove the pipe in the lower part behind the machine and mount it to the plastic connector shown in diagram (put a rag underneath to collect water spillage).
- ② Connect the pipe supplied with the machine to the connector. The maximum drain height is 1m.
3. Make sure that the pipe is not bent or twisted (the end of the drain tube must not be immersed in the drain water to avoid risk of siphoning).


The hoses maximum length is 1,5 m.

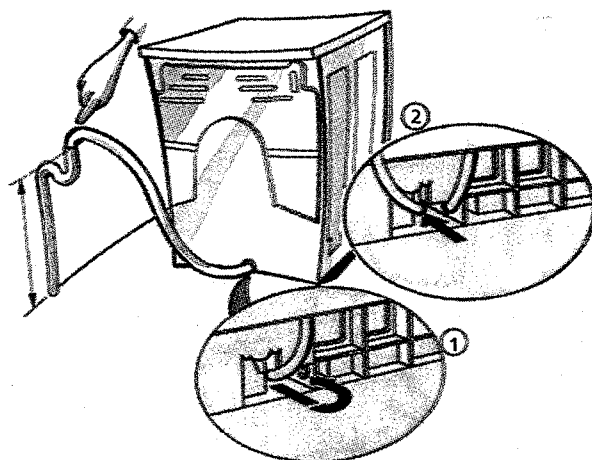

## DOOR REVERSIBILITY


### To change the direction of opening of the clear door

1. Unplug the dryer.
2. Open the door.
- ③ Remove the contact pin at the upper part of the door with a spanner. Turn the contact pin 90° and take it out.
4. Unscrew the 2 screws at the door hinge and remove the door.
- ⑤ Unscrew the two screws above and below the door lock system and remove the plate.
- ⑥ To remove the door lock:
  - Press the hook at the upper part down with a screw driver, pull it forward and take the lock system out.
7. To change the door opening:
  - Turn the door.
  - Re-fit the door with the 2 screws at the preferred position.
  - Hang the door lock system at the opposite side of the door and latch it.
  - Fix the plate with the 2 screws above and below the door lock system.
8. Replace the contact pin in the top of the door.

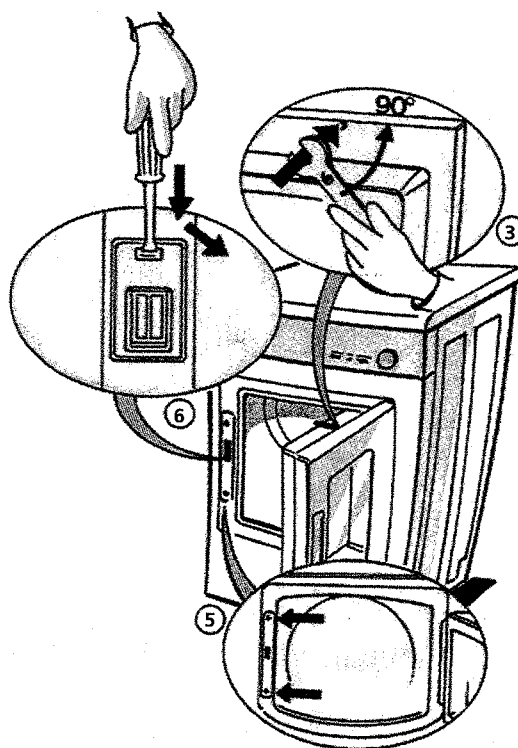


### To change the direction of opening of the non-clear door

1. Unplug the dryer.
2. Open the door.
- ③ Remove the contact pin at the upper part of the door with a spanner. Turn the contact pin 90° and take it out.
4. Unscrew the 2 screws at the door hinge and remove the door.
- ⑤ To remove the door lock:
  - Unscrew the two screws above and below the door lock system and slide it upwards (1,5 cm) holding it from the bottom. Remove it.
6. To change the door opening:
  - Turn the door.
  - Re-fit the door with the 2 screws at the preferred position.
  - Insert the door lock system at the opposite side of the door and move it (1,5 cm) down.
  - Fix the 2 screws above and below the door lock system.
7. Replace the contact pin in the top of the door.

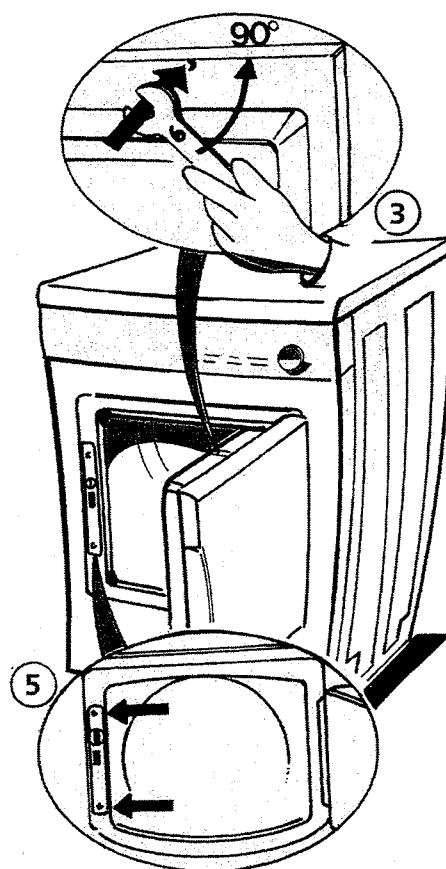

## MAINTENANCE

1. Wipe the cabinet with a mild household detergent. Avoid using abrasive cleaners.
2. Clean the lint filter after every drying cycle.
3. If the filter mesh is dirty, clean it with a soft brush.
4. Clean the heat exchanger at least every three months proceeding as follows:
  - Open the door and press the button on the bottom of the aperture.
  - The heat exchanger flap opens.
  - Lift slightly the heat exchanger and remove it.
  - Wipe away fluff from the gasket using a damp cloth.
  - Flush the heat exchanger under running water.

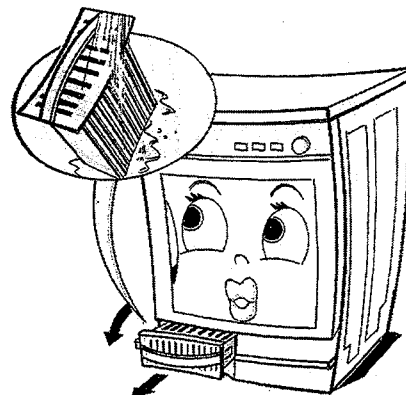

- Slide heat exchanger into position and push down to engage and close flap.

**Note:** The heat exchanger plates may discolour with use.

## TROUBLE SHOOTING GUIDE

Should your dryer operate incorrectly, check the following points before calling for a service engineer.

### **Drying is too long / clothes are not dry enough:**

- Have you selected the correct programme?
- Were the inserted clothes too wet (Spin speed less than 800 rpm)?
- Is the lint filter dirty? (warning indicator on)
- Is the heat exchanger clean?

### **The dryer does not operate:**

- Is the plug properly connected to the mains supply?
- Is there a power failure?
- Has the fuse blown?
- Is the door closed?

- Has the start button been pressed?
- Has the drying programme been selected?

### **Lint filter or water indicator light on**

- Is the lint filter clean?
- Is the water container empty?

### **Replacing light bulb**

If the interior light does not work, the bulb may perhaps be faulty.

- Unplug dryer!
- Open door and unscrew glass cover inside the drum.
- Replace faulty bulb with a new one and screw glass cover back on.
- Replacement bulb: 15W, 220/240 V, E14, suitable up to 300° C.

## AFTER-SALES SERVICE

If after the above checks your appliance does not work properly, get in touch with the nearest After-Sales Service Centre.

Please give:

- a short description of the fault.
- the exact model of the appliance.
- the service number visible on the right when door is open.


**SERVICE** 0000 000 00000








- your correct address and telephone number.

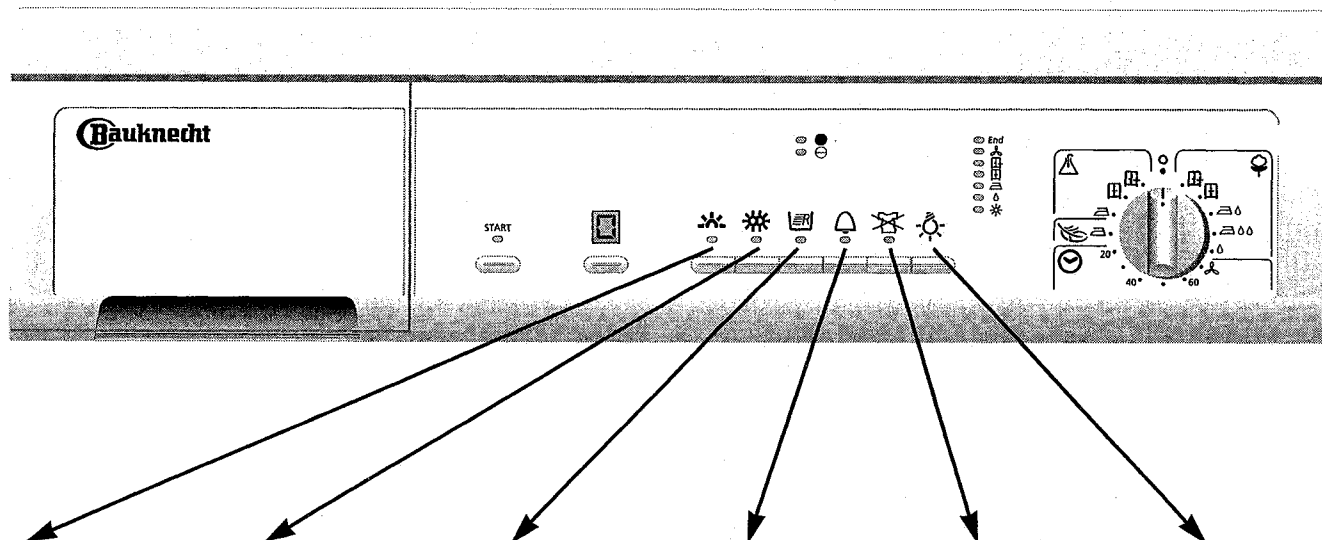

- START** Start button
- "Machine on" light
- Start delay
- ⚙ Gentle
- ⚙ Plus
- ⚙ Rapid
- 🔔 Buzzer
- 🌀 Anticrease
- 💡 Light (available on TRK 4970 and TRK 4974)
- ⦿ Filter warning indicator
- 🚰 Water container indicator
- End** Programme end indicator








Type of fabric	Dryness level / Programmes	* : Options that can be selected											
		Gentle	⚙	Plus	☀	Rapid	📄	Buzzer	🔔	Anticrease	🚫	Light	💡
 Cotton 5 kg	🔲 Extra dry	*		*		*		*		*		*	
	🔲 Cupboard dry	*		*		*		*		*		*	
	⚖️ Iron dry 1	*		*		*		*		*		*	
	⚖️ Iron dry 2	*		*		*		*		*		*	
	💧 Damp	*		*		*		*		*		*	
 Easycare 2,5 kg	🔲 Extra dry	*		-		-		*		*		*	
	🔲 Cupboard dry	*		*		-		*		*		*	
	⚖️ Iron dry	*		*		-		*		*		*	
 Delicates	⚖️ Iron dry	-		-		-		*		*		*	
 Time programmes	20 Min	-		-		-		*		*		*	
	30 Min	-		-		-		*		*		*	
	40 Min	-		-		-		*		*		*	
	50 Min	-		-		-		*		*		*	
	60 Min	-		-		-		*		*		*	
 Airing	Useful to eliminate smells in clothes, such as from tobacco, etc.												
		-		-		-		*		*		*	

**NOTES:**

- The options „Gentle“ and „Rapid“ cannot be selected together. The option „Gentle“ has the priority.
- The options „Buzzer“ and „Anticrease“ cannot be selected together. The option „Anticrease“ has the priority.

Start

End

Starttaste

Betriebsanzeigelampe


Schontaste

Trocknen Plus

Störanzeigelampe (Flusensieb)


Störanzeigelampe (Wasserbehälter)

Endeanzeigelampe

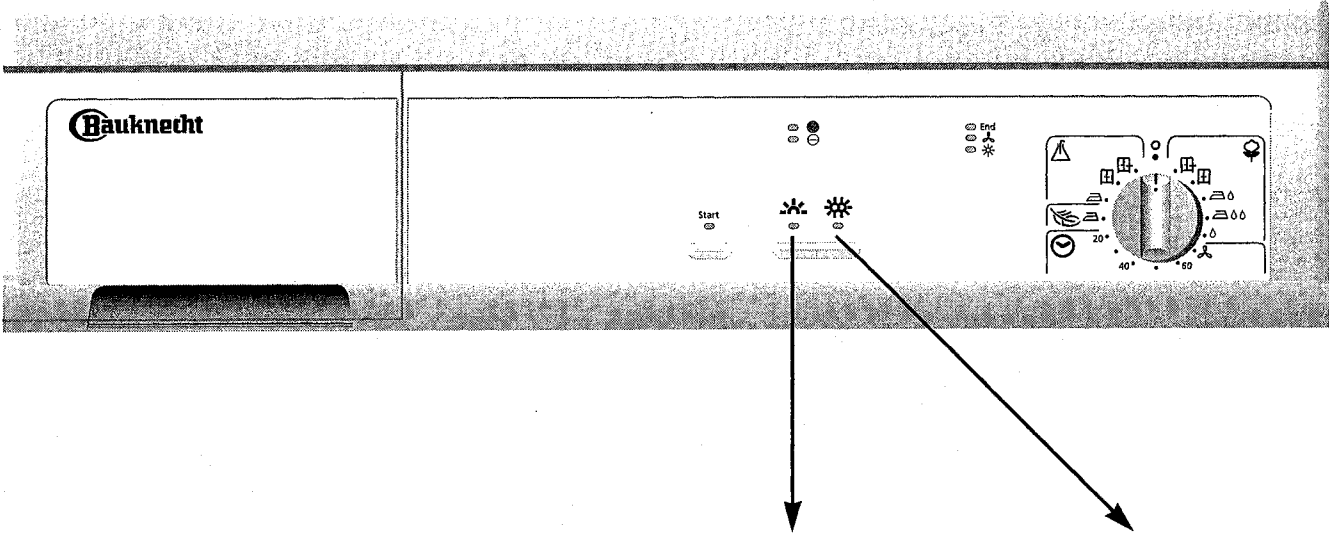

Wäscheart	Trockengrad / Programme	* : ZUWAHLBARE ZUSATZFUNKTIONEN			
		Schon		Trocknen Plus	
<b>Bunt-Kochwäsche</b> 5 kg	 Extratrocken	*		*	
	 Schranktrocken	*		*	
	 Bügelrocken 1	*		*	
	 Bügelrocken 2	*		*	
	 Mangelrocken	*		*	
<b>Pflegeleicht</b> 2,5 kg	 Extratrocken	*		-	
	 Schranktrocken	*		*	
	 Bügelrocken	*		*	
<b>Feinwäsche</b>	 Bügelrocken	-		-	
<b>Zeitprogramme</b>	20 Minuten	-		-	
	30 Minuten	-		-	
	40 Minuten	-		-	
	50 Minuten	-		-	
	60 Minuten	-		-	
<b>Lüften</b>		Um die Wäsche von Tabakrauch usw. auszulüften.			
		-		-	

- START** Starttaste
- Betriebsanzeigelampe
  - Schontaste
  - Trocknen Plus
  - Kurz
  - Summer
  - Knitterschutz (nur bei Modell TRK 4850)
  - Störanzeigelampe (Flusensieb)
  - Störanzeigelampe (Wasserbehälter)
- End** Endeanzeigelampe

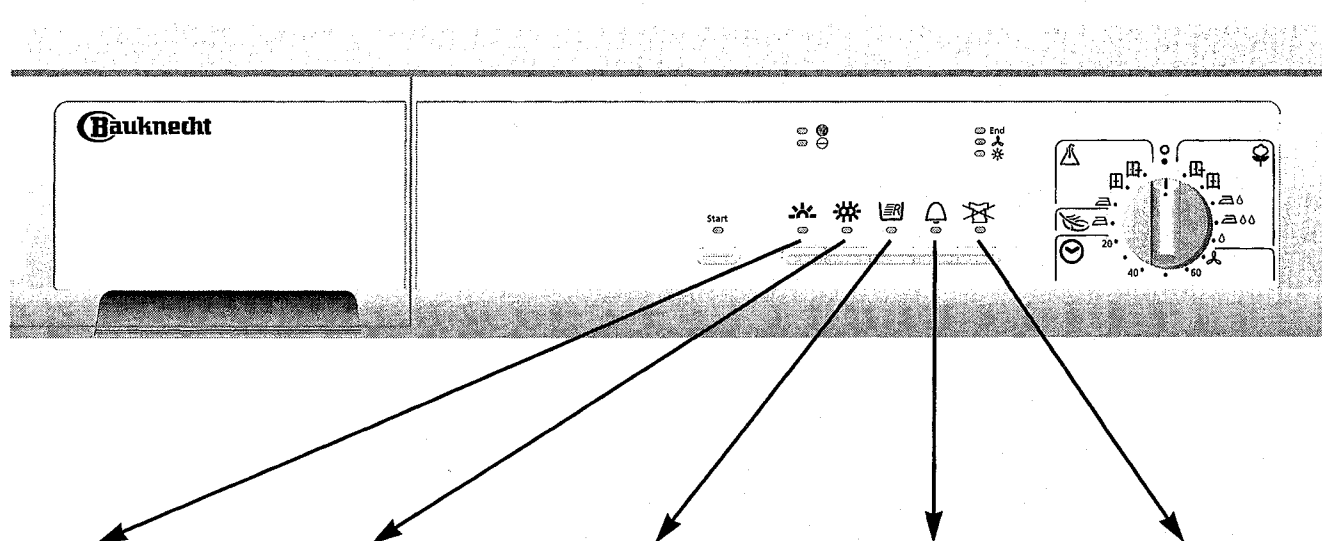

Wäscheart	Trockengrad / Programme	* : ZUWAHLBARE ZUSATZFUNKTIONEN					
		Schonen	Trocknen Plus	Kurz	Summer	Knitterschutz	
Bunt-Kochwäsche 5 kg	Extratrocken	*	*	*	*	*	
	Schrankschranktrocken	*	*	*	*	*	
	Bügeltrocken 1	*	*	*	*	*	
	Bügeltrocken 2	*	*	*	*	*	
	Mangeln	*	*	*	*	*	
Pflegeleicht 2,5 kg	Extratrocken	*	-	-	*	*	
	Schrankschranktrocken	*	*	-	*	*	
	Bügeltrocken	*	*	-	*	*	
Feinwäsche	Bügeltrocken	-	-	-	*	*	
Zeitprogramme	20 Minuten	-	-	-	*	*	
	30 Minuten	-	-	-	*	*	
	40 Minuten	-	-	-	*	*	
	50 Minuten	-	-	-	*	*	
	60 Minuten	-	-	-	*	*	
Lüften	Um die Wäsche von Tabakrauch usw. auszulüften.						
		-	-	-	*	*	

**Bemerkungen:** ① Die Optionen „Schonen“ und „Rapid“ können nicht kombiniert werden. Die Funktion „Schonen“ hat Vorrang.

② Die Optionen „Summer“ und „Knitterschutz“ können nicht kombiniert gewählt werden. Die Funktion „Knitterschutz“ hat Vorrang.